


# 3" "NEATCO"™ footvalve

## Installation sheet

### INSTALLATION

Store "NEATCO" safety footvalve original packaging safe from dust and chocks. For packaging reasons the operating lever is placed in position A.

The leakproof face of the connection is machined with a rounded bottom spiral gasket. The mounting flange must be machined in identical or similar fashion.

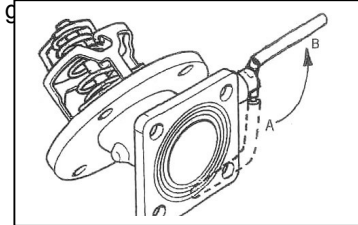

### ASSEMBLY

Make sure no dirt or grit has remained on the receiving flange and gasket.

- 6 m.daN for M12 studs or bolts (spanner 19 mm)
- Open and then close the footvalve 2 or 3 times to ensure that it is operating correctly after fitting
- the NEATCO footvalve is then ready for use

**IMPORTANT: BEFORE FITTING THE "NEATCO" FOOTVALVE THE CONTAINER MUST BE CORRECTLY CLEANED AND RINSED TO REMOVE ANY IMPURITY THAT COULD COMPROMISE THE SEAL QUALITY.**

Pull out the split pin and remove the washer on the control spindle so that the operating lever can be turned round to the "B" position. Then replace the washer and split pin. Fit the "NEATCO" internal safety shut-off valve to the container.

### EXTERNAL DIMENSIONS

	Flange tank side	Flange discharge side	L	ND
30° model	∅ 210 and 4 holes x ∅ 18 x ∅ PCD 178 out of axis	square 144 and 4 x ∅ 18 x ∅ PCD 160	115 97	3"
45° model	∅ 203 and 8 holes x ∅ 14 x ∅ PCD 178 out of axis	square 144 and 4 x ∅ 18 x ∅ PCD 160 Other on request	115	

