

3" "TANKFLY"™ clamped butterfly valve

Maintenance sheet

BUTTERFLY SEAL REPLACEMENT

- Place the butterfly valve in a bench vice, and remove the tightening flange.
- With a screwdriver, remove the ring maintaining the flange,
- Remove the valve from the bench vice. Dismantle the flange and the seal. The bearing surface must be clean from defects or scratches, that could alter the tightness (replace the butterfly if necessary). Place the new seal.
- Reassemble the flange and the ring in the groove, push on the ring with the appropriate PEROLO tool (a mark indicates the tool position / rep.B). Push the tightening flange firmly, and complete final assembly with a "mallet" (rep.C).

