


MAINTENANCE SHEET


"NEATFLOW" 3" footvalve

Spindle seals replacement


① Release the external spring

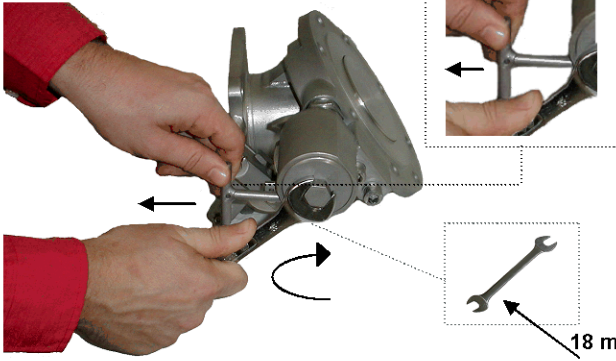

② Pull out poppet firmly

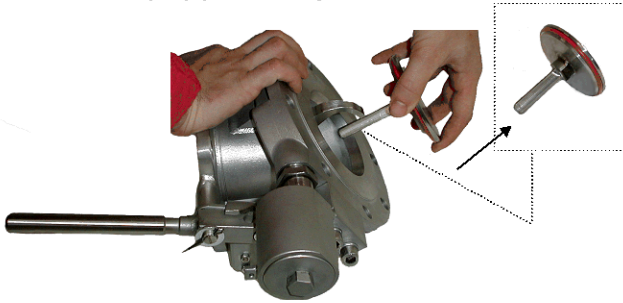

③ Pull out the external spring box

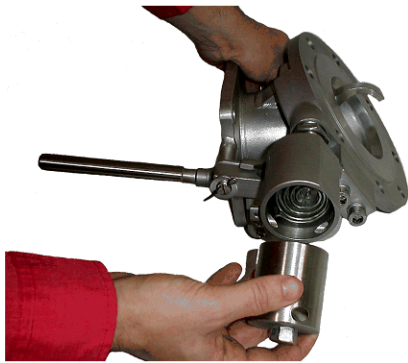


④ Remove the spring out of its box




⑤ Unscrew the 2 screws




⑥ Pull out the spring box closure

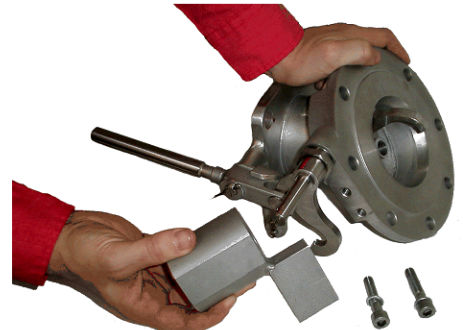

⑦ Take off the spindle and replace seals and bearing

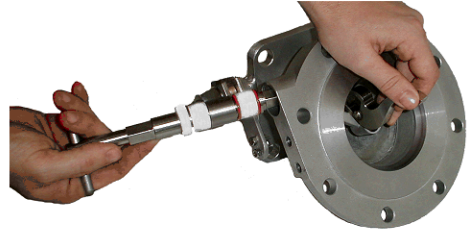

⑧ Pull out the spindle with the locking pin

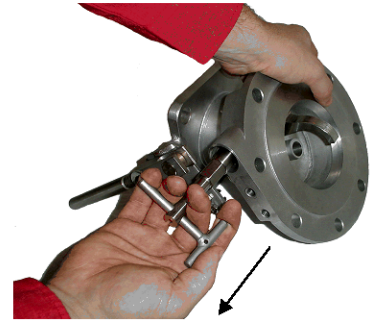

⑨ Unscrew the packing gland with locking ring

