


Maintenance sheet**SPRING BENDING TOOL**


1°) Install the tool on spring box

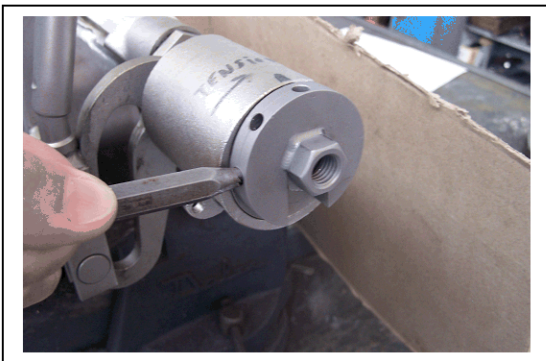

2°) Position a wrench on the tool hexagon
bend the spring rotating clockwise



3°) Maintain the tool in position with a pin
you can then remove the wrench, position
it down without rotating the spring box

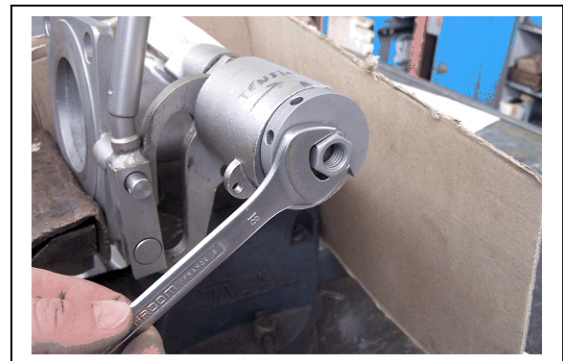

4°) Continue to bend the spring clockwise



5°) Insert the stop pin