


INSTALLATION

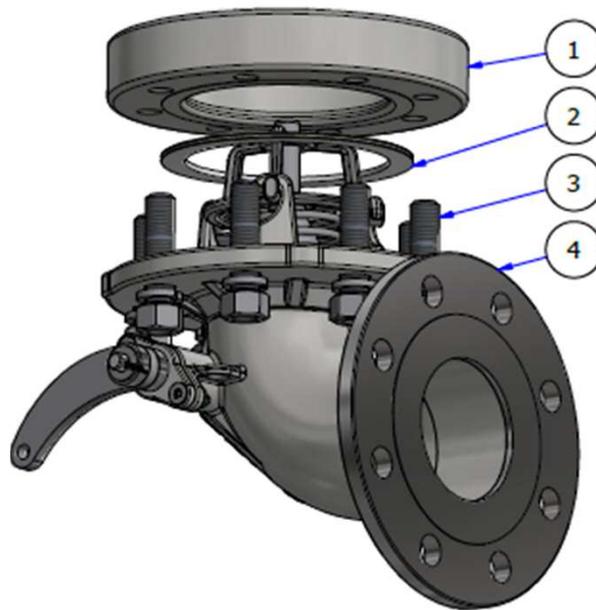

Ensure that the Inlet (tank side) flange and gasket are clean; free from dirt and grit.

1. Screw the studs into the tank container flange. Take careful note of the position of the studs.
2. Fit the PTFE gasket.
3. Fit the CHIM Footvalve in position.
4. Tighten the studs and nuts at a maximum torque of 50 N.m. +/-5
5. Refer to PWAGENE001 for bolt tightening sequence.



ITEM	DESCRIPTION	SPECIFICATION	PART N°
1	3" CHIM Footvalve	3" 90° footvalve, inlet flange 8 x Ø18 x 160PCD Outlet flange 8 x Ø18 x 160PCD	17 16 15 10 00
2	Inlet Gasket	ext ø 140 mm, int ø 114 mm, no drilling CNAF / PTFE Round gasket	17 12 12 90 04
3	Stud kit	8 x M16-64 studs - 8 x M16 nuts - 8 x M16 washers	11 99 31 90 00
4	Weld-in flange	ext ø 200 mm, int ø 114.3 mm thickness 35 mm, 8 x M16 x 160 PCD 316L stainless steel	12 92 31 00 00